

Installation Guide

Fixed (non-swiveling/non-tilting) Flush Mount for VESA-compatible Flat Panel Display

The purpose of this guide is to:


1. Describe attachment of Flush Mount to display.
2. Describe mounting of Flush Mount in Channel.



Parts Reference

The following parts and hardware are included in this installation kit (hardware not shown):


Item #	Description	Qty
1	Flush Mount	1
2	Mounting Kit for 75/100 VESA Compatible Flat Panel Displays	1
3	Adjustable Stop (not shown)	1

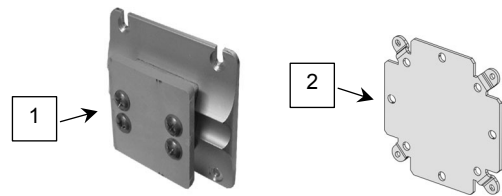

Tools Required: Phillips screwdriver (not provided).

Installation Note: This installation procedure requires hardware from the *Mounting Kit for 75/100 VESA Compatible Flat Panel Displays* (item #2 in Parts Reference). If the display has a 75 x 75mm mounting pattern (rear of display), follow the procedure below. If the display has a 100 x 100mm mounting pattern: 1) follow instructions (DU-FLP-0002-17) included with the *Mounting Kit for 75/100 VESA Compatible Flat Panel Displays* before attaching the Flush Mount.

1. Using M4 pan head machine screws (PHMS) from the Mounting Kit (Item #2), fasten Flush Mount to display (or Mounting Adapter) as shown below.

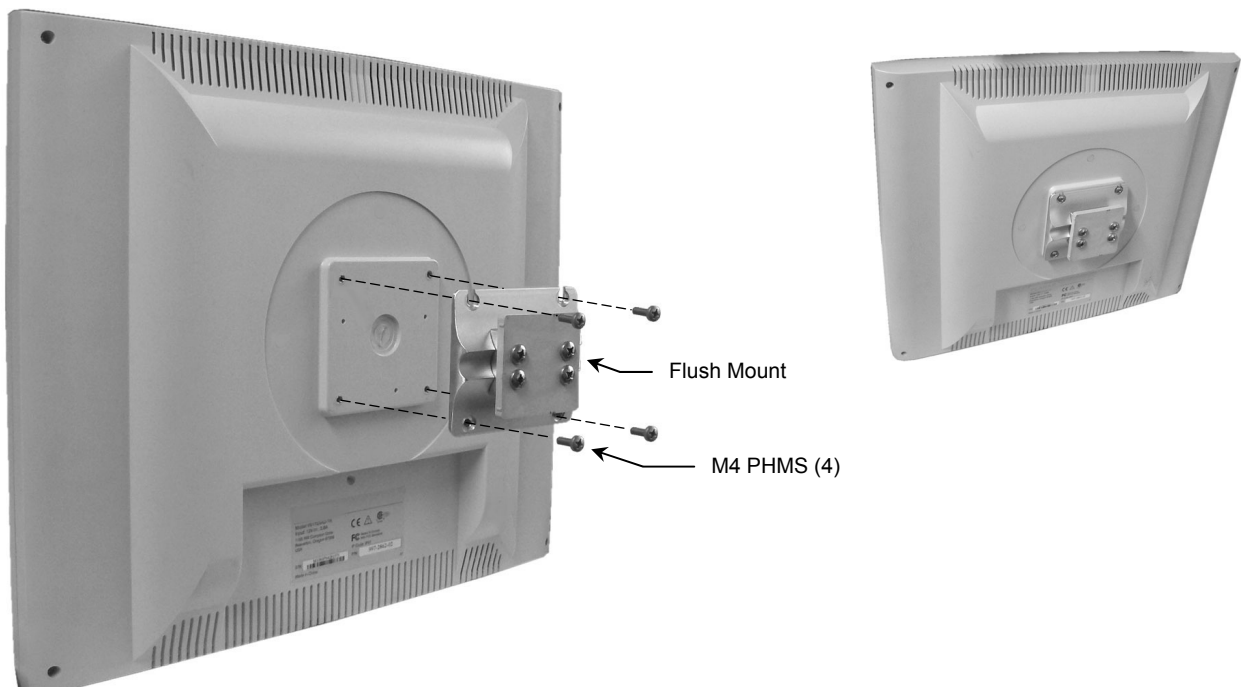

2. Insert Adjustable Stop in Channel, guide to desired display-mounting position, and tighten center screw (below left).
3. Insert the Channel Slide (rear of Flush Mount) into the channel and guide the display down the channel until the Slide contacts the Adjustable Stop.

